

 
Dialog
TELEVISION



USER MANUAL

Powered by **androidtv**

QUICK GUIDE

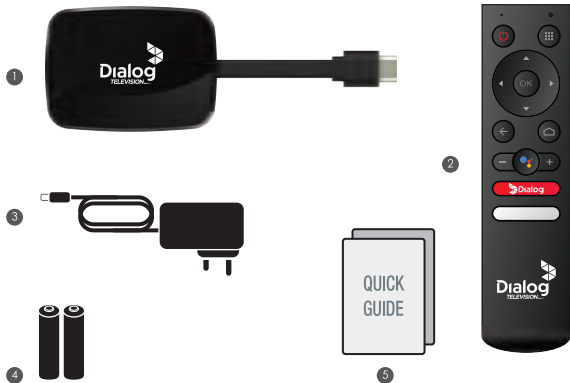

1 SEI103DL

 
2 Remote Control

3 Power Adapter

4 Battery

5 Quick Guide


DEVICE INFORMATION

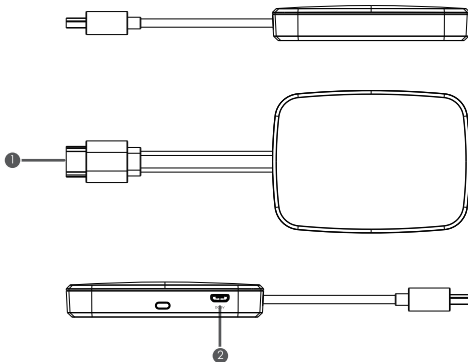

① HDMI Output

② DC Power Input

 SETUP DIAGRAM

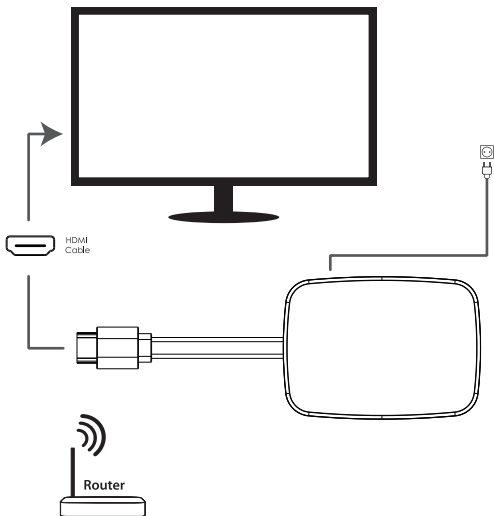

REMOTE CONTROL



Get the most out of your Android TV™ with Google Assistant built in:

Android TV™ provides a smarter viewing experience. Watch blockbuster movies, stream apps, and enjoy multiplayer games. And with the Google Assistant built in, you can do more faster. Ask it questions, discover the best content, control smart devices around your home—all with just your voice.

Basic Troubleshooting Guide

Troubleshooting

No signal on the HDTV

- Check if the HDMI cable is securely connected.
- Check if you have selected the correct HDMI input on your HDTV.

Cannot connect to network

- Make sure the network / internet cable is securely connected and the Ethernet port properly.
- Make sure the Wi-Fi network is connected and the security key for the encrypted network is correctly inserted.
- Make sure you select the correct IP address settings.


Some HDTV cannot display the entire picture

- Setup the screen ratio on your HDTV as automatic.
- On your HDTV, go to the ratio type, choose automatically display the entire screen.

The remote control does not work

- Make sure the batteries are in a good condition and they are inserted correctly in the remote control.
- Make sure no objects block the path between the remote control and the signal sensor of your receiver.


ANDROID TV

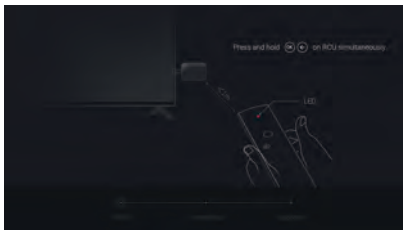

1




Long press Back+OK button at the same time, until the red light flashes quickly, then release, that means RCU enter the pairing mode. Waiting for few seconds and stop pressing any buttons, until it pop up the message of pairing successfully

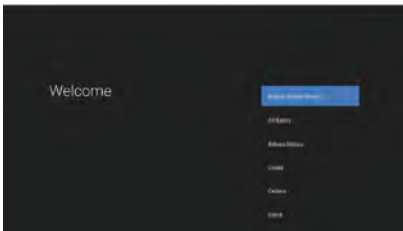

2

Set up your language

 ANDROID TV

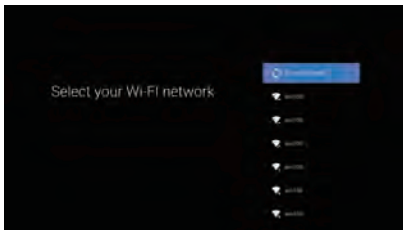


4

Set up your network




Set up your TV with an
Android phone or tablet

 3

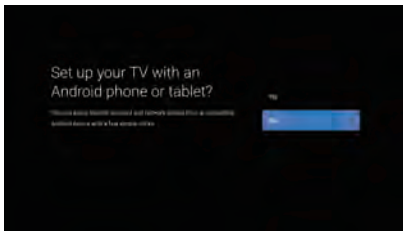

ANDROID TV

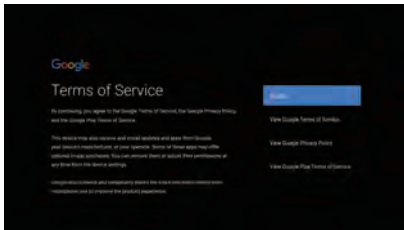 

5

Follow the guide to set it up



6

Welcome to Android TV! Walk through the features of your new device by press OK or D-pad button

SPECIFICATION

Hardware	
Chipset	Amlogic S805X
RAM	1Gb
Flash	eMMC 8GB
Video	
Video Decoding	VP9 Profile-2 up to 1080p@60fps H.265 HEVC MP-10@L4.1 up to 1080p@60fps H.264 AVC HP@L4.2 up to 1080p@30fps H.264 MVC up to 1080P @60fps MPEG-4 ASP@L5 up to 1080P@60fps WMV/VC-1 SP/MP/AP up to 1080P@60fps AVS-P16(AVS+) /AVS-P2 JiZhun Profile up to 1080P@60fps RealVideo 8/9/10 up to 1080P@60fps WebM up to VGA
Video File Format	Support *.mkv, *.wmv, *.mpg, *.mpeg, *.dat, *.avi, *.mov, *.iso, *.mp4, *.rm, *.jpg, *.bmp, *.gif etc...
Video Output	HDMI 2.0A, HDCP2.2
Aspect Ratio	Auto, Full screen
Video Resolution	1080P
Power	
DC Input Range	5V/1.5A
Power Consumption	Maximum 7.5 W

SAFETY INFORMATION



CAUTION!

NOTICE: To prevent fire and electric shock, do not expose this receiver to rain or moisture. In order to avoid any possible risk of electric shock, never attempt to open the unit. In case of the unit breaking down, repair of the unit should be carried out by qualified technicians. No part of this unit should be repaired by users.

WARNING!

- Place the receiver in a well-ventilated location to prevent accumulation of internal heat.
- Protect the receiver from high temperatures, humidity, water and dust.

Do not place any objects that might damage your unit near it (e.g. liquid filled

- objects or candles).

Google, Android, Android TV, YouTube and other related marks and logos are trademarks of Google LLC.

ANDROID TV

Android TV™ brings a world of content to your biggest screen. With the Google Assistant built in, you can quickly access entertainment, get answers, and control devices around your home. Find the latest blockbuster, check the score of the big game, or dim the lights. Just say "Hey Google," or press the mic button on your remote to get started

Basic Troubleshooting Guide

- Make sure the distance between the remote control and your receiver is no more than 5 meters.
- Check the power of your batteries, in case it is depleted, please get them replaced with new ones.
- Make sure the Bluetooth is connected successfully.

No picture or sound

- Check if the Audio / Video output connection from your receiver to your TV is connected correctly.
- In case of no sound: Press the MUTE key.
- In case of no picture: Turn TV on.